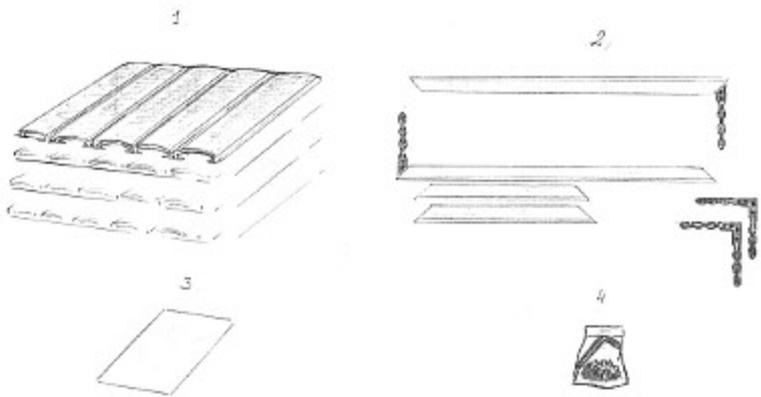
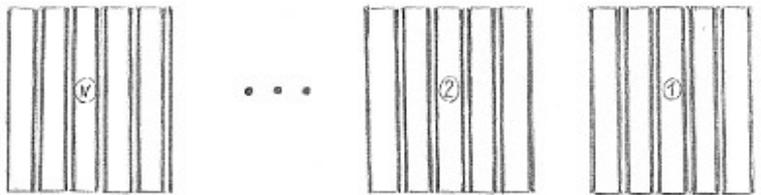
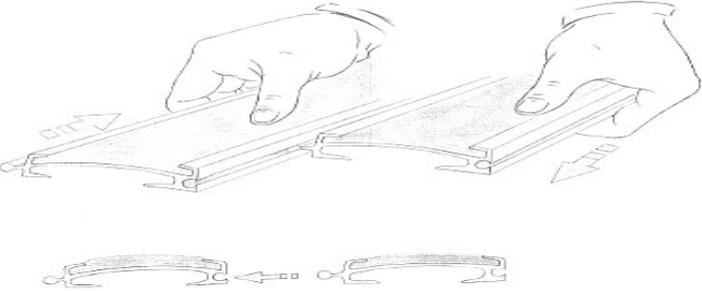



How to assemble the mat and frame

According to the ordered size mat and the transport conditions, your mat may be delivered per disassembled modules or packed directly. If your mat is delivered disassembled by modules, follow the instructions below:

<p>1. Unpack the package, find a packing list and check the contents of the package.</p> <p>2. Carefully take out the profiles of the packaging.</p> <p>3. Check for scratches and defects</p>	 <p>фиг. 1 Modules. фиг. 2 Mat frame and corner frame planks. фиг. 3 Packing list, How to assemble the mat and the frame instruction фиг. 4 Plastic bag with screws and Allen key</p>
<p>4. Find the signs for start and end on the back of every modules and arrange them on the ground, following the indications!</p> <p>5. Take out from the small plastic bag the screws and the Allen key.</p>	
<p>6. Start the assembling by sliding the two profiles each other to the point of turning the screw.</p>	

7. Put the screw into the screw hole and turning it.


Repeat this action until assembling all the moduls.

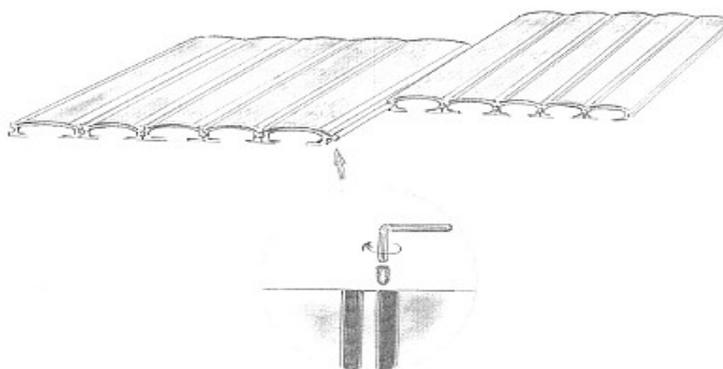

Congratulations - you've already assembled the mat without mat frame.
If the mat is assembled, skip steps 1 to 7

8. If you ordered entrance mat with mat frame, take the 4 corner planks, the mat frame profiles and 16 screws.


9. Turn the frame profile from the bottom side, as indicated. Put the end of the frame profile into the groove. Slide the second frame profile, and carefully insert the other part of frame corner plank into the groove.

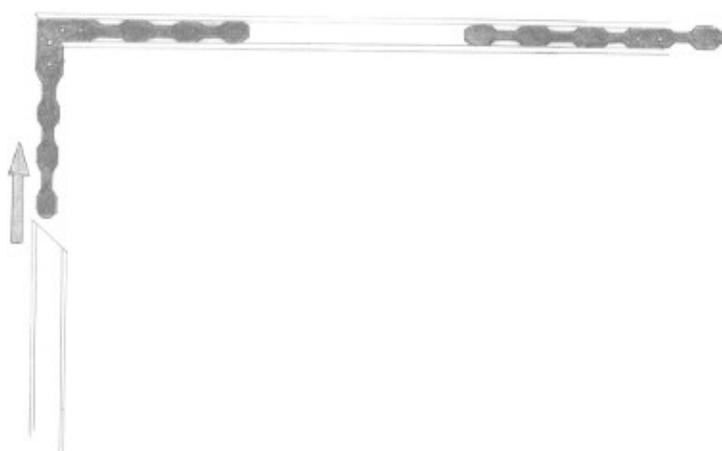

10. Use the Allen key and 4 screws and fix the frame corner plan.

11. Repeat the p. 9 and 10 for all 4 mat well corners.

11. Put into the ready mat frame the entrance mat.

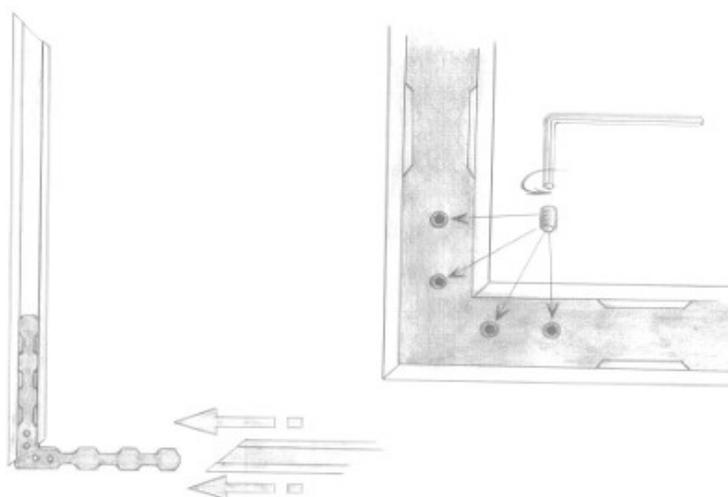

Your entrance mat and frame are ready to install in the mat well.