
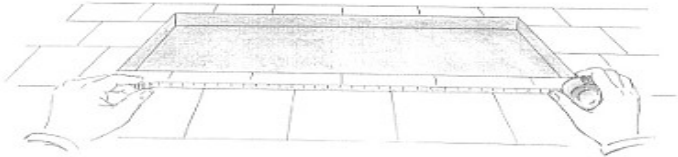
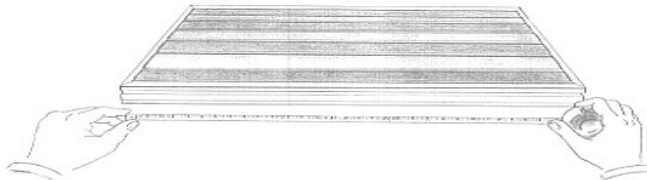
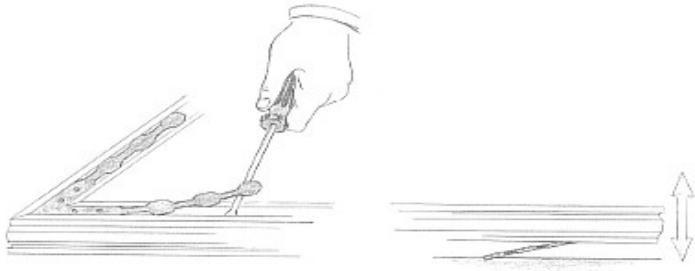


## How to install the mat and the mat frame


To install your entrance mat properly, please follow the instruction:

<p>1. 1. Check the mat well sizes.</p>	
<p>2. Check the mat sizes. The size of the mat well should be approx 5 mm bigger than the mat size. The depth of the mat well should be around 23-25 mm.</p>	
<p>3. Turn upside down the mat frame. With the screwdriver lift the 2 ends of each mat corner plank. Please, see the picture. Put the mat frame in the mat well. Use the created "legs" to level the frame.</p>	


4. The base of the mat well should be healthy and strong. To level the base, use self leveling compound. Prepare self leveling compound according to the manufacturer technical data. If you need to lift and flat the level above 3-5 mm may be necessary to use special filler mixtures suitable for large thicknesses.

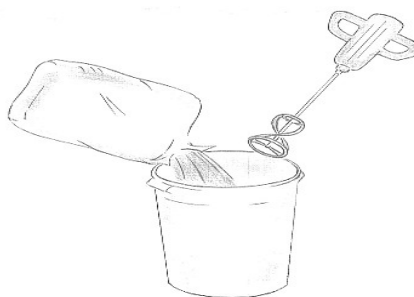

5. Place the mat frame in the mat well and level it. The upper edge of the frame profile should be flat at floor level.

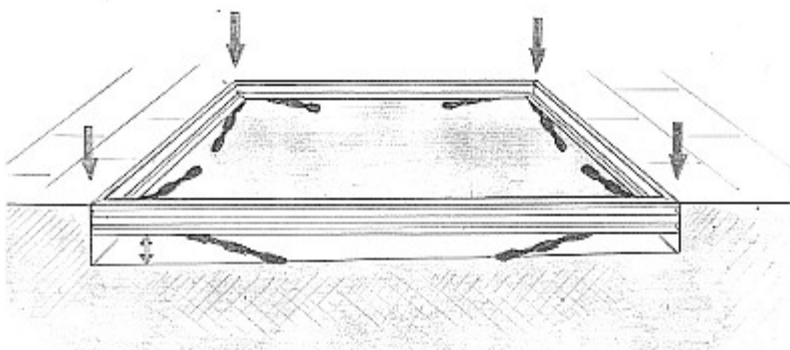

6. Fill with prepared self leveling compound up to the upper horizontal edge frame profile so that the mat has to 'lie' on equal base. See the picture. "Legs" of the frame corner planks are poured with self leveling compound and prevent of the frame profile. This eliminated the needed of the pins attached.

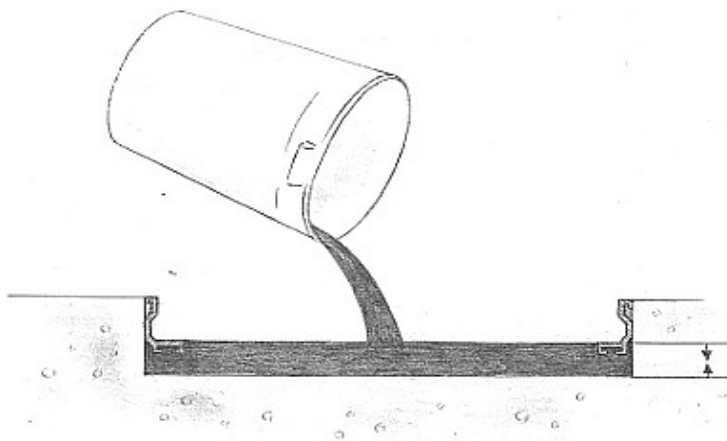

7. When the self levelling compound is dry and achieve its final strength, depends of the manufacture technical data and the weather conditions, you can place the mat in the mat well.