


How to prepare the mat well

To install the entrance mat properly, the mat well has to be made according to certain rules and requirements.

Measuring

1. On the floor, draw the shape and size of the mat well, according the mat ordered. Please note that the mat well size should be about 5 mm larger than the overall size of the mat. Be careful with width and length - the length size is taken in the direction of movement (L). The width is parallel to the size of the door frame (W).

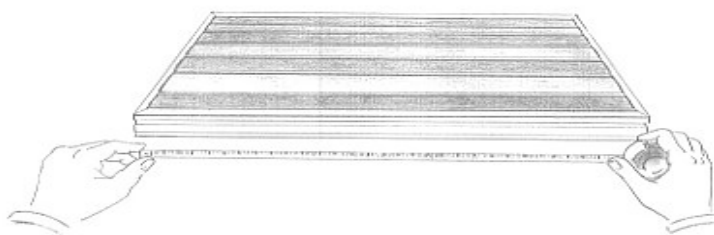

Cutting the mat well

2. Carefully cut with a proper machine. The depth of the mat well must be $\approx$ 23-25 mm, at least 23 mm. The depth depends of the body heigh of the mat frame. If the depth is higher, you can use a proper self levelling compound. Check the mat well size after cutting.

